

ZANUSSI

User
manual

Dishwasher



ZDT 110

Content

Safety information	3
Control panel and functions	4
Audible signals	6
Programme table	7
Before the first use	8
Setting the water softener	8
Filling with dishwasher salt	11
Filling with rinse aid	12
Adjusting the dosage of rinse aid	12
Loading cutlery and dishes	13
Filling with detergent	15
Unloading the dishwasher	15
Cleaning and care	16
Environmental concerns	17
Something not working	18
Technical data	20
Consumption values	20
Hints for Test Institutes	21
Installation	22
Guarantee/Customer Service	25
European guarantee	27

ZANUSSI

Safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

Correct use

- This dishwasher is only intended for washing household utensils suitable for machine washing.
- Do not put any solvents in the dishwasher. This could cause an explosion.
- Knives and other items with sharp points must be loaded in the cutlery basket with their points down or placed in a horizontal position in the upper basket.
- Only use products (detergent, salt and rinse aid) suitable for dishwashers.
- Avoid opening the door whilst the appliance is in operation, hot steam may escape.
- Do not take any dishes out of the dishwasher before the end of the dishwashing cycle.
- After use, isolate the appliance from the power supply and turn off the water supply.
- This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used.

General safety

- Dishwasher detergents can cause chemical burns to eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer.
- The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine.

- Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves.
- Do not sit or stand on the open door.

Child safety

- This appliance is designed to be operated by adults. Don't allow children to use the dishwasher unsupervised.
- Keep all packaging well away from children. There is risk of suffocation.
- Keep all detergents in a safe place out of children's reach.
- Keep children well away from the dishwasher when the door is open.

Installation

- Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier.
- All packaging must be removed before use.
- Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person.
- For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way.

- Never use the dishwasher if the electrical supply cable and water hoses are damaged; or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Service Force centre, in order to avoid hazard.


- All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components.

WARNING!

For electrical and water connection carefully follow the instructions given in specific paragraphs.

Control panel and functions

In this fully integrated appliance the controls are located on the top of the door. When selecting a washing programme, the door needs to be slightly open.

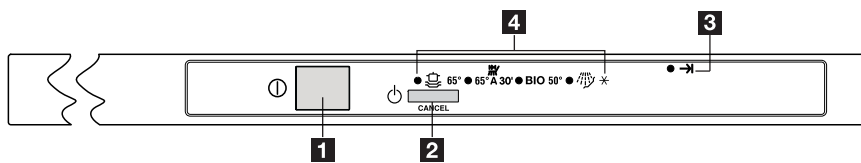

1. On-Off button
2. Programme/Cancel button
3. End of cycle light
4. Programme lights

IMPORTANT!

Always remember that when performing operations such as:

- selecting a washing programme,
- deactivation/activation of the audible signals,
- setting the water softener,

the appliance **MUST** be in setting mode:

- Press On-Off button, all programme lights are illuminated and **End of cycle** light flashes = **appliance in setting mode**.
- Press On-Off button, a programme light is illuminated and **End of cycle** light is illuminated with fixed light = **last performed programme still set**.
In this case the programme has to be cancelled (see instructions "Cancel a washing programme in progress").

ZANUSSI

Programme/Cancel button	<p>● Starting the washing programme:</p> <ol style="list-style-type: none"> 1. Press the On-Off button. 2. Press the Programme/Cancel once, the light of the last performed washing programme illuminates and the End of cycle light flashes. 3. Press the Programme/Cancel as many times as necessary to illuminate the light corresponding to the desired programme. 4. Close the dishwasher's door, the programme will start automatically. <p>IMPORTANT!</p> <p>Once the programme has started, if you want to change the selection made you must cancel the washing programme in progress.</p> <p>● Cancel the washing programme in progress:</p> <ol style="list-style-type: none"> 1. Open the door. 2. Press and hold the Programme/Cancel button until the light of the running programme turns off and the End of cycle light is flashing. 3. Release the Programme/Cancel button. 4. Switch off the machine by pressing the On-Off button or select a new washing programme (check that there is detergent in the detergent dispenser).
End of cycle →	<p>Illuminates when a washing programme has ended.</p> <p>Switch of the dishwasher by returning the programme selector dial to the Off position. The On/Off indicator light turns off.</p> <p>It also has added functions of visual signalling as:</p> <ul style="list-style-type: none"> - the setting of the water softener, - intervention of an alarm due to the malfunction of the machine. - deactivation/activation of the audible signals.


Audible signals

Audible signals have been introduced to help indicate which operations the dishwasher is performing.

- end of the washing programme,
- malfunction of the appliance.

Factory setting: audible signals activated.

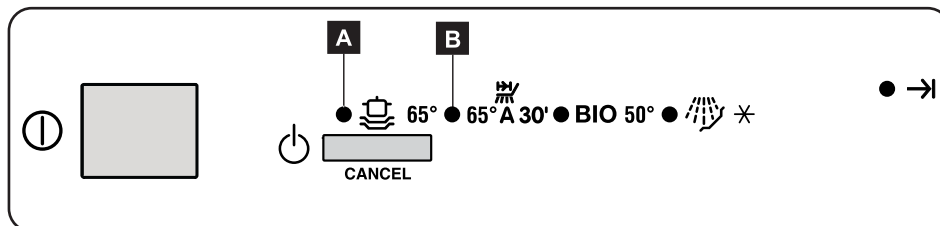


Deactivation/activation of the audible signals



1. The dishwasher must be switched off.
Switch on the dishwasher by pressing the On-Off button.
2. Press and hold **Programme/Cancel** button until programme light **A** flashes and programme light **B** illuminates with fixed light.
3. Press **Programme/Cancel** button again: programme light **A** becomes fixed and programme light **B** starts flashing.
4. After a few seconds programme light **A** turns off, programme light **B** goes on flashing and **End of cycle** light illuminates with fixed light. The illumination of the **End of cycle** light means that the audible signals are active.
5. To deactivate the audible signals, press the **Programme/Cancel** button, the **End of cycle** light turns off indicating that the audible signals have been deactivated.
6. To memorise the operation, switch off the dishwasher by pressing the On-Off button.
7. To reactivate again the audible signals, follow the instructions till point 4. Wait a few seconds and then press the **Programme/Cancel** button, the **End of cycle** light illuminates indicating that the audible signals have been reactivated.

ZANUSSI

Programme table

Programme	Use	Cycle description
65° NORMAL 	Normal soil Crockery and cutlery	Prewash Main wash 2 intermediate rinses Final rinse Dry
 65° A 30'	Light soil Crockery and cutlery	Main wash Final rinse
BIO 50°	Normal soil Crockery and cutlery	Prewash Main wash 1 intermediate rinse Final rinse Dry
RINSE & HOLD 	Any Partial load (to be completed later in the day). This programme does not require the use of detergent.	Prewash

Before the first use

When using separate special (dishwasher) salt, rinse aid and detergent:

- set the water softener
- add special salt
- fill up with rinse aid

When using tablets that integrate rinse aid and detergent:

there is no need to fill up with rinse aid

- set the water softener
- add special (dishwasher) salt

When using tablets that integrate rinse aid, detergent, salt function and other additives:

there is no need to fill up with special salt or rinse aid.

Check whether these detergents are suitable for your water hardness. Follow the manufacturers instructions.

- Set the water hardness to level 1.

IMPORTANT!

If the drying results are not satisfactory we recommend that you:

1. Fill up the rinse aid dispenser with rinse aid.
2. Set the rinse aid dosage to position 2.

If you decide in future to use separated detergents, we advise that you:

- Fill up the salt and rinse aid container.
- Adjust the water hardness setting to the highest level and perform 1 normal washing programme without loading any dishes.
- Adjust the water hardness setting according to the hardness of the water in your area.
- Adjust the rinse aid dosage

Setting the water softener

The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance.

The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area.

IMPORTANT!

The water softener must be set in both ways: manually and electronically.

ZANUSSI



Water hardness			Number of flashes of the "end of programme" light	Adjustment of the water hardness setting	
in Clarke ¹⁾	in °TH ²⁾	in mmol/l ³⁾		manually	electronically
64 - 88	91 - 125	9,0 - 12,5	10	2	level 10
53 - 63	76 - 90	7,6 - 8,9	9	2	level 9
46 - 52	65 - 75	6,5 - 7,5	8	2	level 8
36 - 45	51 - 64	5,1 - 6,4	7	2	level 7
28 - 35	40 - 50	4,0 - 5,0	6	2	level 6
23 - 27	33 - 39	3,3 - 3,9	5	2	level 5 <small>factory setting</small>
18 - 22	26 - 32	2,6 - 3,2	4	1	level 4
13 - 17	19 - 25	1,9 - 2,5	3	1	level 3
5 - 12	7 - 18	0,7 - 1,8	2	1	level 2
< 5	< 7	< 0,7	1	1	level 1 no salt necessary

1) Clarke degree, measure of the water hardness.

2) (°TH) French degree, measure of the water hardness.

3) (mmol/l) millimol per litre, international unit for water hardness

Setting the water softener manually (see table)

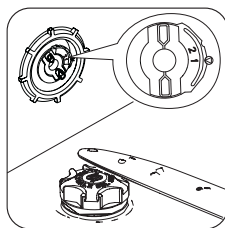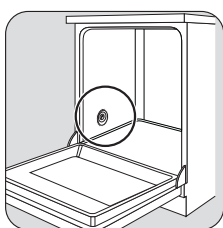


Set switch to position 1
or 2

The water softener is factory set at position 2.

Setting the water softener electronically (see table)

The water softener is factory set at position 5.

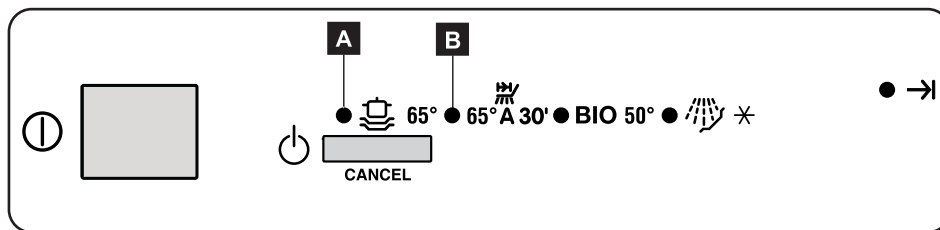




1. The dishwasher must be switched off.
Switch on the dishwasher by pressing the On-Off button.
2. Press and hold **Programme/Cancel** button until programme light **A** flashes and programme light **B** illuminates with fixed light.
3. Wait until programme light **B** turns off, programme light **A** goes on flashing and simultaneously **End of cycle** light starts flashing. The number of flashes of the **End of cycle** light corresponds to current level set.
The **End of cycle** light might flash 5 times, for example. The flashing is repeated every 5 seconds.
4. To change the level, press the **Programme/Cancel** button. Each time the button is pressed the level increases. (Level 1 follows level 10). The **End of cycle** light indicates the new setting.
5. To memorise the operation, switch off the dishwasher by pressing the On-Off button.

ZANUSSI

Filling with dishwasher salt


CAUTION!

Use only special salt suitable for dishwashers

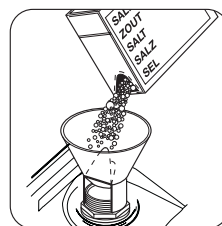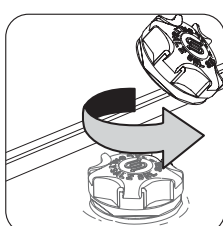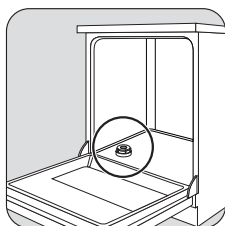


Only before filling with salt for the first time, fill the salt container with water


Using the funnel provided, pour in the salt until the container is filled with salt.

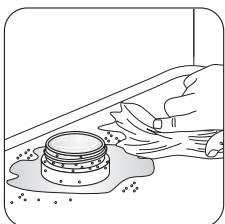

Remove any trace of salt.

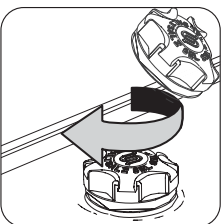

Replace the cap tightly turning it clockwise until it stops with a click.

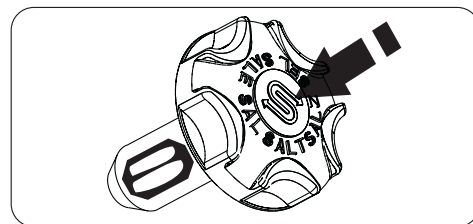

The salt cap has a refill indicator window in the centre in which a green float is clearly visible when there is salt inside the container and almost disappears when the salt has finished.

IMPORTANT!

Water will overflow from the container as salt is added.



IMPORTANT!

The salt container will require topping up periodically.


IMPORTANT!

Immediately start a complete programme.

Filling with rinse aid

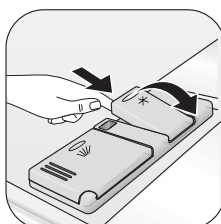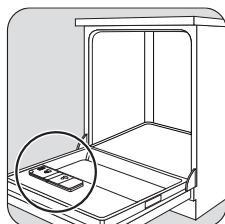


Open the lid.

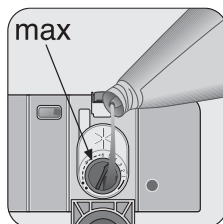

Fill up with rinse aid. The maximum level for filling is indicated by "max".



Clean up any rinse aid which overflows. Close the lid and press until it locks.

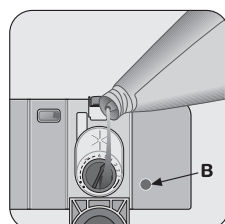

Top up the rinse aid when the indicator (B) becomes clear.





CAUTION!

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This would damage the appliance.


Adjusting the dosage of rinse aid

Increase the dose if there are drops of water or lime spots on the dishes after washing.


Reduce the dose if there are whitish streaks on the dishes or a bluish film on glassware or knife blades.

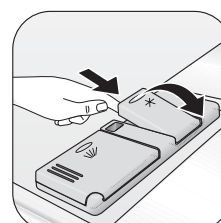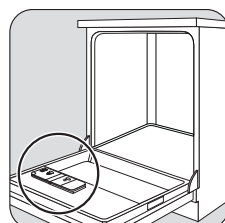

Open the lid.

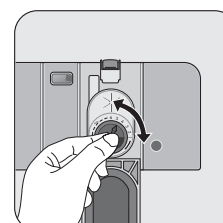

Set the dosage level. (The dose is factory set in position 4).

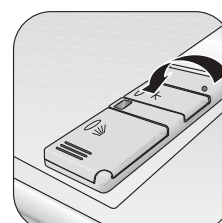

Close the lid and press until it locks.


ZANUSSI

Loading cutlery and dishes


- The following items are not suitable for use in the dishwasher:
 - Cutlery with wooden, horn, china or mother-of-pearl handles
 - Plastic items that are not heat resistant
 - Older cutlery with glued parts that are not temperature resistant
 - Bonded cutlery items or dishes
 - Pewter or copper items
 - Lead crystal glass
 - Steel items prone to rusting
 - Wooden platters
 - Items made from synthetic fibres
- When loading the dishwasher, make sure that you:
 - Remove all left over food and debris.
 - Soften remnants of burnt food in pans
 - Load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base.
 - Dishes and items of cutlery must not lie inside one another, or cover each other.
 - To avoid damage to glasses, they must not touch.
 - Lay small objects in the cutlery basket.
- **Plastic items and pans with teflon have a tendency to retain water drops; these items will not dry as well as porcelain and steel items.**

IMPORTANT!


Before closing the door, ensure that the spray arms can rotate freely.

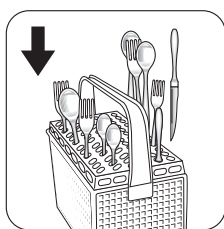


Load cutlery.
For best results we recommend you to use the cutlery grid provided (if the size and dimensions of the cutlery allow it).

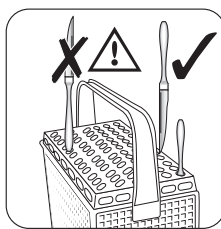


Place knives and other items of cutlery with sharp points or edges with their handles facing upwards.
Risk of injury!

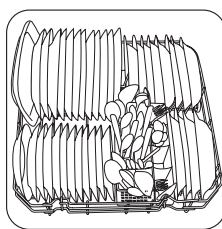


Load the lower basket.
Arrange serving dishes and large lids around the edge of the basket.

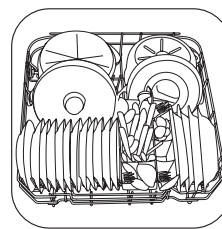


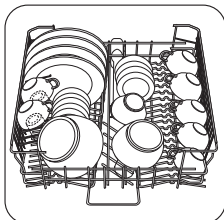

Load upper basket. Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

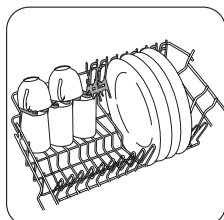

For taller items, the cup racks can be folded upwards.

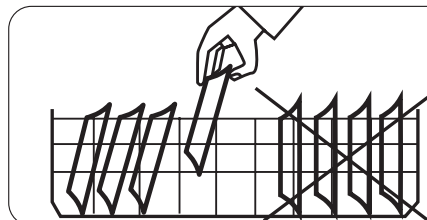


If plates are to be loaded in the upper basket:
load them starting from the rear positions; tilting them slightly forwards and avoiding the front positions near the door.


Adjusting the height of the upper basket

If washing very large plates you can load them in the lower basket after moving the upper basket to the higher position.

Maximum height of the dishes in:		
	upper basket	lower basket
With upper basket raised	20 cm	31 cm
With upper basket lowered	24 cm	27 cm

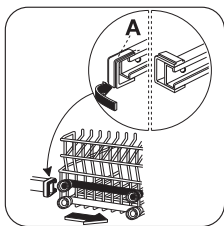

Move the front runner stops (A) of the upper basket outwards and slide the basket out.

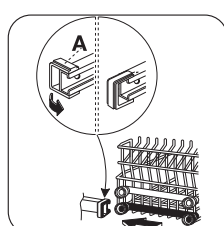

Refit the basket in the higher position and replace the stops (A) in their original position.

IMPORTANT!


When the basket is in the higher position you will not be able to use the cup racks.

ZANUSSI


Filling with detergent

IMPORTANT!


Only use detergents suitable for dishwashers.
Observe the manufacturer's dosing and storage recommendations.

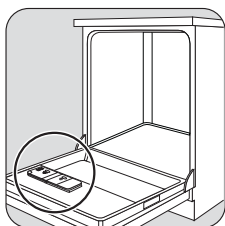


Open the lid.

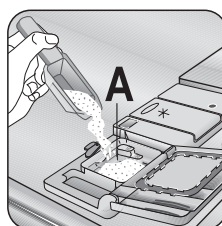


Fill in the detergent in compartment A.

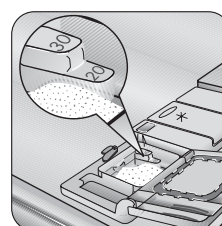

Observe the dosing levels.

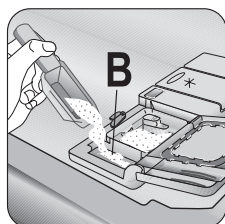

For programmes with prewash add an additional detergent dose in compartment B.

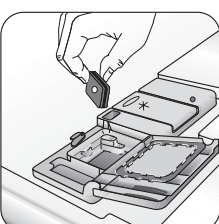

When using detergent tablets: place detergent tablets in compartment A.



Close the lid.

Unloading the dishwasher

IMPORTANT!

Open the dishwasher's door, leave it ajar and wait a few minutes before removing the dishes; hot dishes are sensitive to knocks. In this way they will be cooler and the drying will be improved.

- Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.
- Water may appear on the sides and the door of the dishwasher as the stainless steel will eventually become cooler than the dishes.


Cleaning and Care

Cleaning the filters


IMPORTANT!

NEVER use the dishwasher without filters.


Incorrect repositioning and fitting of the filters will produce poor washing results.

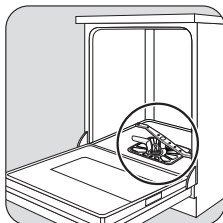


The dishwasher must be switched off

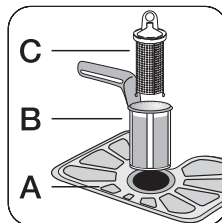


Clean filters **A**, **B** and **C** thoroughly under running water.

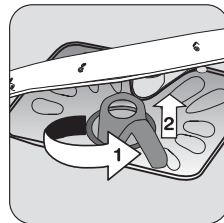


Turn the handle about $\frac{1}{4}$ turn anticlockwise and remove filters **B** and **C**.

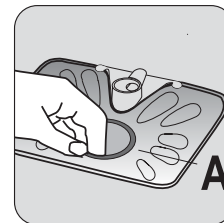

Remove filter **A** from the base of the washing compartment.

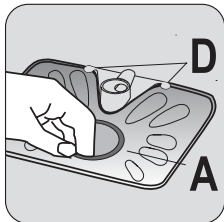

Put the flat filter **A** back in the base of the washing compartment and ensure that it fits perfectly under the two guides **D**.

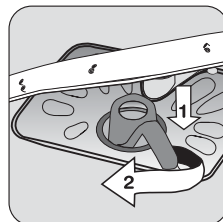

Replace the filters and lock by turning the handle clockwise to the stop.

IMPORTANT!

NEVER try to remove the spray arms.

If residues of soil have clogged the holes in the upper spray arm, remove them with a toothpick.

ZANUSSI

External cleaning

Clean the external surfaces of the machine and control panel with a damp soft cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent (acetone, trichloroethylene etc....). Ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth. We recommend every 3 months to run a 65°C wash programme without dishes using detergent.

Prolonged periods of non-operation

If you are not using the machine for any period of time you are advised to:

1. Unplug the appliance and then turn off the water.
2. Leave the door ajar to prevent the formation of any unpleasant smells.
3. Leave the inside of the machine clean.

Frost precautions

Avoid placing the machine in a location where the temperature is below 0°C. If this is unavoidable, empty the machine, close the appliance door, disconnect the water inlet pipe and empty it.

Moving the machine

If you have to move the machine (moving house etc...):

1. Unplug it.
2. Turn the water tap off.
3. Remove the water inlet and discharge hoses.
4. Pull the machine out together with the hoses.
5. Only transport the dishwasher in an upright position, otherwise salt water may run out.

Environmental concerns

Packaging material


The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

WARNING!

When a unit is no longer being used:

- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch.
This prevents children from trapping themselves inside and endangering their lives.

Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Something not working

IMPORTANT!

The dishwasher will not start or stops during operation.

Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the indications described in the chart, without calling out an engineer.

Open the door and see which fault code is active.

Switch off the dishwasher and carry out the following suggested corrective actions.

Fault code / malfunction	Possible cause	Solution
The dishwasher does not fill with water. - 1 intermittent audible signal - 1 flash of the "end of cycle" indicator light	The water tap is blocked or furred with limescale. The water tap is turned off. The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. The water inlet hose has not been correctly laid or it is bent or squashed.	Clean the water tap. Turn the water tap on. Clean the filter in the threaded hose fitting. Check the water inlet hose connection.
The dishwasher will not drain. - 2 intermittent audible signals - 2 flashes of the "end of cycle" indicator light	The sink spigot is blocked. The water drain hose has not been correctly laid or it is bent or squashed.	Clean out the sink spigot. Check the water drain hose connection.
- 3 intermittent audible signals - 3 flashes of the "end of cycle" indicator light	Anti-flood device is activated.	Close the water tap and contact your local Service Force Centre.
The programme does not start.	The dishwasher door has not been properly closed.	Close the door
	The main plug is not plugged in.	Insert the mains plug
	The fuse has blown in the household fuse box.	Replace the fuse.

Once these checks have been carried out; switch on the dishwasher, press the **Programme/Cancel** button and close the door. The programme will continue from the point at which it was interrupted. If the malfunction or fault code reappears contact the Service Force Centre.

For other combinations of fault codes not described in the above chart, please contact your Service Force Centre.

ZANUSSI

The wash results are not satisfactory

The dishes are not clean

- The wrong washing programme has been selected.
- The dishes were arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded.
- The spray arm do not rotate freely due to incorrect arrangement of the load.
- The filters in the base of the washing compartment are dirty or incorrectly positioned.
- Too little or no detergent has been used.
- Where there are limescale deposits on the dishes; the salt container is empty or the incorrect level of the water softener has been set.
- The drain hose connection is not correct.
- The salt container cap is not properly closed.

The dishes are wet and dull

- Rinse aid was not used.
- The rinse aid dispenser is empty.


There are streaks, milky spots or a bluish coating on glasses and dishes

- Decrease rinse aid dosing.

Water drops have dried onto glasses and dishes

- Increase rinse aid dosing.
- The detergent may be the cause, Contact the detergent manufacturer's consumer care line.

If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.). This information can be found on the rating plate located on the side of the dishwasher door (see picture).

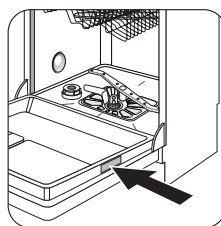

So that you always have these numbers at hand, we recommend you to make a note of them here:

Mod. :
 PNC :
 S.N. :

Technical data

Dimensions	Width Height Depth.	59.6 cm 81.8 - 87.8 cm 55.5 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door.	
Water supply pressure	Minimum Maximum	0,05 MPa (0.5 bar) 0,8 MPa (8 bar)
Capacity		12 place settings
Max. weight		37
Noise level		51 dB (A)

Consumption values

The consumption values are intended as a guide and depends on the pressure and the temperature of the water and also by the variations of the power supply and the amount of dishes.

Programme	Programme duration (minutes)	Energy (kWh)	Water (litres)
65° NORMAL	105 - 115	1,5 - 1,7	23 - 25
65° A 30'	30	0,9	9
BIO 50° (Test programme for Test Institutes)	140	1,05	18
RINSE & HOLD	12	< 0,1	5

ZANUSSI

Hints for test institutes


Testing in accordance with **EN 60704** must be carried out with appliance fully loaded and using the test programme (see "Consumption values").

Test in accordance with **EN 50242** must be carried out when the salt container and rinse aid dispenser have been filled with salt and rinse aid respectively and using the test programme (see "Consumption values").

	Full load: 12 standard place settings
Amount of detergent required:	5 g + 25 g (Type B)
Rinse aid setting:	position 4 (Type III)




Upper basket

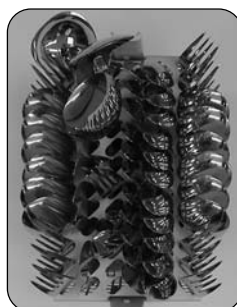

Cutlery basket



Lower basket

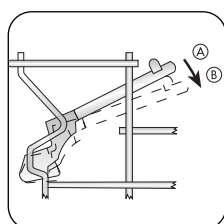

Cup racks: position A

Installation

WARNING!

Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person.

Water connection

WARNING!

The dishwasher must not be connected to open water appliances or instantaneous water heaters. This dishwasher may be fed with either hot (max. 60°) or cold water. Nevertheless we advise you a cold water supply.

WARNING!

Only use, for connection to the water mains, new hose-set; old hose-set must not be reused.

CAUTION!

If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose.

Water inlet hose with safety valve

Connect the inlet hose to a water tap with an external thread of 3/4".

After connecting the double-walled water inlet hose, the safety valve is next to the tap.

If the water inlet hose leaks, the safety valve cuts off the water supply.

WARNING!

The electrical cable for the safety valve is in the double-walled water inlet hose and is live.

Therefore do not immerse the water inlet hose or the safety valve in water.


Take care when installing the water inlet hose.

Place the water inlet hose in such a way that it is always lower than the bottom edge of the safety valve.




If the water inlet hose or the safety valve is damaged, remove the mains plug immediately.

ATTENTION!

A water inlet hose with safety valve **MUST** only be replaced by your local Service Force Centre.

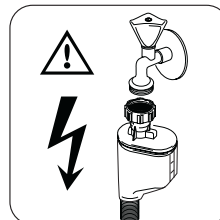

ZANUSSI

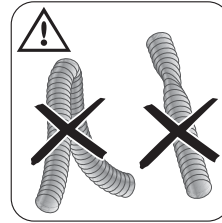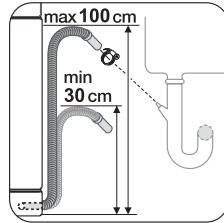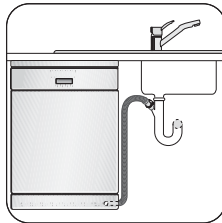

Drain hose

- Connect drain hose to the sink. Secure it with the supplied hose clamp.
- Required height: 30 to 100 cm above bottom of the dishwasher.
- If you use a drain hose extension the total length should not be longer than 4 metres. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.

Ensure that the hoses are not kinked, crushed or entangled.

CAUTION!

Always be sure, that there is no water leakage from hoses and their connections after the installation.

Electrical connection

WARNING!

Safety standards require the appliance to be earthed. The manufacturer accepts no liability for failure to observe the above safety precautions.

Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate.

Always plug the mains plug into a correctly installed shockproof socket.

WARNING!

Multi-way plugs, connectors and extension cables must not be used. This could constitute a fire hazard through overheating.

If necessary, have the domestic wiring system socket replaced. In case that the electrical cable has to be replaced, contact your local Service Force centre.

The plug must be accessible after the appliance has been installed.

Never unplug the appliance by pulling on the cable. Always pull the plug.

Fitting under a counter

IMPORTANT!

Carefully follow the instructions on the enclosed template for building in the dishwasher and fitting the furniture panel.

△

WARNING!

The dishwasher must be secured against tilting.

Therefore make sure that the counter it is fixed under, is suitably secured to a fixed structure (adjacent kitchen units cabinets, wall).

This dishwasher is designed to be fitted under a kitchen counter or work surface.

No further openings for the venting of the dishwasher are required, but only to let the water fill and drain hose and power supply cable pass through.

The dishwasher incorporates adjustable feet to allow the adjustment of the height.

During all operations that involve accessibility to internal components the dishwasher has to be unplugged.

Be sure that once the appliance has been installed, it is easily accessible for the service engineer in the event that a repair is required.

Levelling

Good levelling is essential for correct closure and sealing of the door.

When the appliance is correctly levelled, the door will not catch on either side of the cabinet.

If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level. (See enclosed template).

ZANUSSI

Guarantee/Customer Service

Belgium

DECLARATION OF GUARANTEE TERMS.

Our appliances are produced with the greatest of care. However, a defect may still occur. Our consumer services department will repair this upon request, either during or after the guarantee period. The service life of the appliance will not, however, be reduced as a result. This declaration of guarantee terms is based on European Union Directive 99/44/EC and the provisions of the Civil Code. The statutory rights that the consumer has under this legislation are not affected by this declaration of guarantee terms. This declaration does not affect the vendor's statutory warranty to the enduser. The appliance is guaranteed within the context of and in adherence with the following terms:

1. In accordance with provisions laid down in paragraphs 2 to 15, we will remedy free of charge any defect that occurs within 24 months from the date the appliance is delivered to the first end user. These guarantee terms do not apply in the event of use for professional or equivalent purposes.
2. Performing the guarantee means that the appliance is returned to the condition it was in before the defect occurred. Defective parts are replaced or repaired. Parts replaced free of charge become our property.
3. So as to avoid more severe damage, the defect must be brought to our attention immediately.
4. Applying the guarantee is subject to the consumer providing proof of purchase showing the purchase and/or delivery date.
5. The guarantee will not apply if damage caused to delicate parts, such as glass (vitreous ceramic), synthetic materials and rubber, is the result of inappropriate use.
6. The guarantee cannot be called on for minor faults that do not affect the value or the overall reliability of the appliance.
7. The statutory warranty does not apply when defects are caused by:
 - a chemical or electrochemical reaction caused by water,
 - abnormal environmental conditions in general,
 - unsuitable operating conditions,
 - contact with harsh substances.
8. The guarantee does not apply to defects due to transport which have occurred outside of our responsibility. Nor will the guarantee cover those caused by inadequate installation or assembly, lack of maintenance or failure to respect the assembly instructions or directions for use.
9. Defects that result from repairs or measures carried out by people who are not qualified or expert or defects that result from the addition of non-original accessories or spare parts are not covered by the guarantee.
10. Appliances that are easy to transport may be delivered or sent to the consumer services department. Home repairs are only anticipated for bulky appliances or built-in appliances.

11. If the appliances are built-in, built-under, fixed or suspended in such a way that removing and replacing them in the place where they are fitted takes more than half an hour, the costs that result there from will be charged for. Connected damage caused by these removal and replacement operations will be the responsibility of the user.
12. If, during the guarantee period, repairing the same defect repeatedly is not conclusive, or if the repair costs are considered disproportionate, in agreement with the consumer, the defective appliance may be replaced with another appliance of the same value. In this event, we reserve the right to ask for a financial contribution calculated according to the length of time it has been used.
13. A repair under guarantee does not mean that the normal guarantee period will be extended nor that a new guarantee period begins.
14. We give a twelve month guarantee for repairs, limited to the same defect.
15. Except in the event where liability is legally imposed, this declaration of guarantee terms excludes any compensation for damage outside the appliance for which the consumer wishes to assert his rights. In the event of legally admitted liability, compensation will not exceed the purchase price paid for the appliance.

These guarantee terms are only valid for appliances purchased and used in Belgium. For exported appliances, the user must first make sure that they satisfy the technical conditions (e.g.: voltage, frequency, installation instructions, type of gas, etc.) for the country concerned and that they can withstand the local climatic and environmental conditions. For appliances purchased abroad, the user must first ensure that they meet the qualifications required in Belgium. Non-essential or requested adjustments are not covered by the guarantee and are not possible in all cases. Our consumer services department is always at your disposal, even after the guarantee period has expired.

Address for our consumer services department:

Belgium

Electrolux Home Products Belgium
ELECTROLUX SERVICE
Bergensesteenweg 719
1502 Lembeek

Consumer services

Tel.: 02/363.04.44

Fax.: 02/363.04.00

02/363.04.60

E-mail:

consumer.services@electrolux.be

Luxembourg

Grand-Duché de Luxembourg
ELECTROLUX HOME PRODUCTS
Rue de Bitbourg, 7
L-1273 Luxembourg-Hamm
Consumer services

Tel.: 00 352 42 431-1

Fax.: 00 352 42 431-360

E-mail:

consumer-service.luxembourg@electrolux.lu

ZANUSSI




European guarantee

This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 27 80 609	Verkiu, 09108 Vilnius
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2, 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 - 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana, d.o.o. Trčaška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	+35 8 26 22 33 00	Konepajanranta 4, 28100 Pori
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabası caddesi no : 35 Taksim Istanbul
Россия	+7 495 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“



Notes



ZANUSSI

www.electrolux.com